
Assembly Instructions


Three Tier One Wide Jorgenson Signature Locker

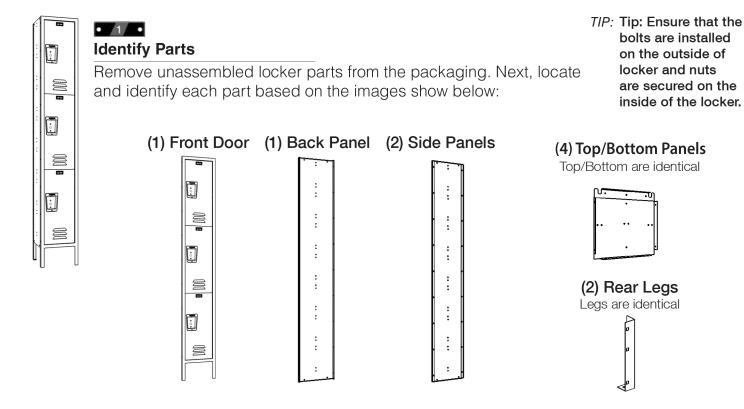

• 2/•

Start Assembling


- Position the back panel on straight, even flooring or pair of saw horses.
- Gently bolt the left and right side panel to the inside of each back panel

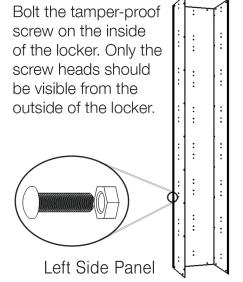

Top holes are 1/2" at the top of each panel shown.

Right Side Panel

View of locker with back panel flat on floor or saw horses

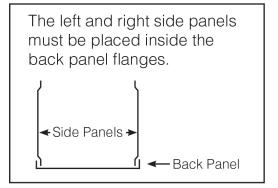




Assembly Instructions

Three Tier One Wide Jorgenson Signature Locker

• 3 •

Continued Assembly


• Slightly bolt the top/bottom panels, and legs inside the side and back panel.

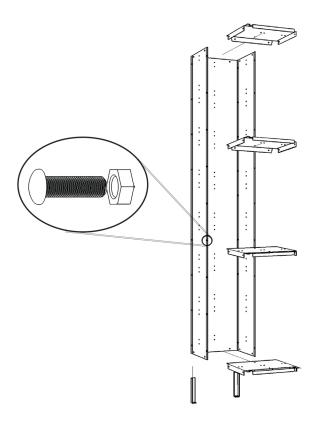

Note:

Top and bottom panels have two (2) round, predrilled holes that can be found on the back flange and are designed to bolt to the back panel.

Legs are now ready to be bolted. Place locker in an upright position, legs might require some adjusting in order to level the locker against the wall and floor.

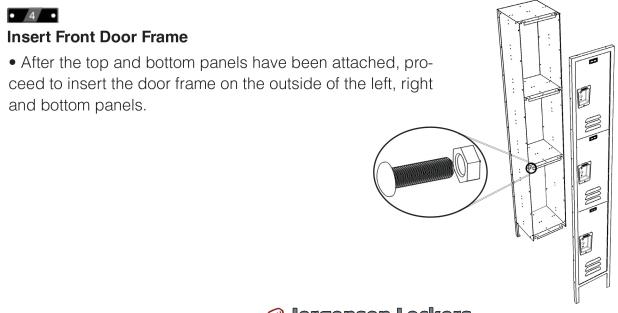

A div. of Jorgenson Industrial Companies

STRONG on Customer Service

Assembly Instructions

Three Tier One Wide Jorgenson Signature Locker

• 5 •

Insert Front Door Frame

- Place locker in the upright position and make sure locker is level, making any necessary adjustments with locker legs.
- When locker is level, test the door to determine it opens properly. Bolts can be adjusted if there are any problems with opening and closing.
- Once the door is functioning correctly, tighten all bolts.
- To instill proper safety measures, we highly advise anchoring the locker to the floor or wall to avoid injury or theft.

